


SIP FASTENERS @ 10" O.C. OR 5 PER 4' PER PANEL WIDTH INTO ALL T.F. MEMBERS

CUT/INSTALL PANEL SUCH THAT THERE IS A 1/2" GAP FOR EXPANDING FOAM SEALANT. FILL GAP W/ CONT. BEAD OF EXPANDING FOAM SEALANT.

STUFF EXPOSED PANEL EDGE W/ CONT. 2x MATERIAL. SECURE O/SB PANEL SKINS TO 2x BLOCKING W/ 6d GALV. NAILS @ 6" O.C. OR EQU. SECURE BOTH SKINS TO 2x.

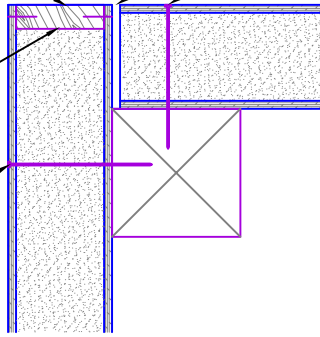


SIP FASTENERS @ 10" O.C. OR 5 PER 4' PER PANEL WIDTH INTO ALL T.F. MEMBERS


APPLY CONT. BEAD OF EXPANDING FOAM SEALANT BETWEEN 2x PANEL FOAM.

Typical T.F. Panel Corner

\* Structural Panel - No Finish

SCALE: 1" = 1'-0"

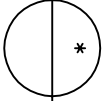

 P.O. Box 185, West Chesterfield, NH 03466 (603) 256-8800	Standard Detail Library		DRAWING:
	Typical T.F. Panel Corner Structural Panel - No Finish		*
DRAWN BY: JTC	DRAWN BY: JTC/TGM	DRAWING NUMBER:	*
DRAWING DATE: 8.4.05	PRINTED DATE: 8.4.05		