


APPLY CONT. BEAD OF PL-300 TYPE
OR EQU. CONSTRUCTION ADHESIVE
BETWEEN I-JOIST FLANGE & PANEL
FOAM.

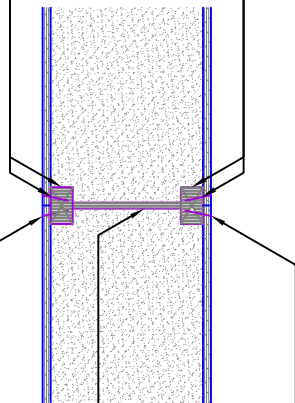


SECURE OSB PANEL SKINS TO I-JOIST
FLANGE W/ 6d GALLY. NAILS @ 6" O.C.
OR EQU.

APPLY CONT. BEAD OF EXPANDING
FOAM SEALANT BETWEEN 2x & PANEL
FOAM (BOTH SIDES OF WEB) PRIOR
TO STUFFING I-JOIST IN PANEL.

SECURE OSB PANEL SKINS TO I-JOIST
FLANGE W/ 6d GALLY. NAILS @ 6" O.C.
OR EQU.

I-Joist Structural Spline Detail
* Structural Panel
SCALE: 1" = 1'-0"

 Foard P A N E L incorporated P.O. Box 185, West Chesterfield, NH 03466 (603) 256-8800	Standard Detail Library		DRAWING:
	I - Joist Structural Spline Detail Structural Panel		*
	DRAWN BY: JTC	DRAWN BY: JTC/TGM	DRAWING NUMBER:
	DRAWING DATE: 8.4.05	PRINTED DATE: 8.4.05	*