

CUT/INSTALL PANELS SUCH THAT THERE IS A 1/2" GAP FOR EXPANDING FOAM SEALANT. FILL GAP W/ A CONT. BEAD OF EXPANDING FOAM SEALANT.


ATTACH ROOF PANELS TO RIDGE BEAM W/ SIP FASTENERS @ 10" O.C. OR 5 PER 4' PANEL WIDTH. TYPICAL UNLESS OTHERWISE NOTED. REQUIRED - MIN. 2" EMBEDMENT INTO MAIN RIDGE BEAM.

STRUCTURAL RIDGE BEAM.

ATTACH BEVELED 2x BLOCKING TO RIDGE BEAM W/ 2 ROWS OF 0.131" DIA. x 3/4" LONG GALV. NAILS @ 8" O.C. OR EQU.

PANEL TO RIDGE BEAM CONNECTION DETAIL

SCALE: 1" = 1'-0"

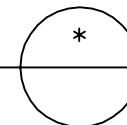

Foard
P A N E L
i n c o r p o r a t e d
P.O. Box 185, West Chesterfield, NH 03466
(603) 256-8800