



CUT/INSTALL PANELS SUCH THAT THERE IS A 1/2" GAP FOR EXPANDING FOAM SEALANT. FILL GAP W/ A CONT. BEAD OF EXPANDING FOAM SEALANT.

ATTACH ROOF PANELS TO VALLEY BEAM W/ SIP FASTENERS @ 10" O.C. OR 5 PER 4' PANEL WIDTH. TYPICAL UNLESS OTHERWISE NOTED. REQUIRED - MIN. 2" EMBEDMENT.

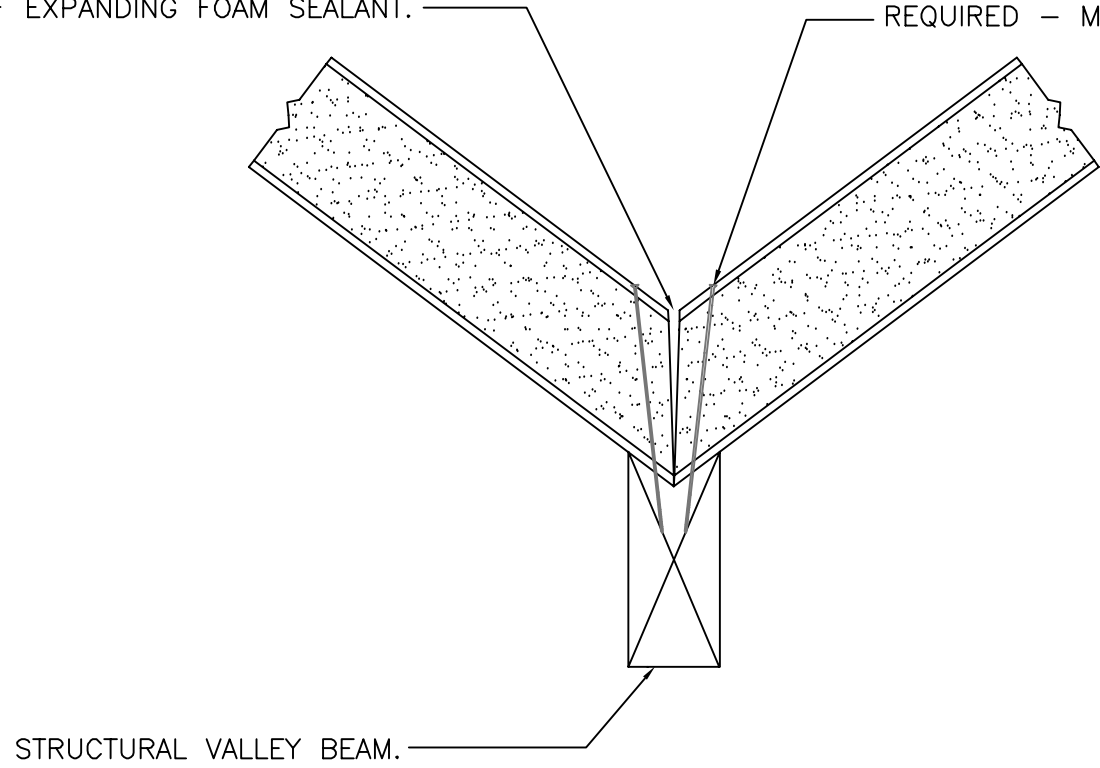

PANEL TO VALLEY BEAM CONNECTION DETAIL
SCALE: 1" = 1'-0"

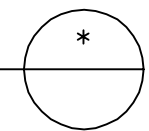

Foard
P A N E L
i n c o r p o r a t e d
P.O. Box 185 , West Chesterfield , NH 03466
(603) 256 - 8800