


#36

# PANEL VALLEY CONNECTION


ATTACH PANELS TO TIMBER FRAME  
MEMBERS W/ SIP FASTENERS @ 10" O.C.  
(5 PER 4' PANEL WIDTH) W/ A MIN. OF  
2" OF EMBEDMENT INTO ALL TIMBERS.  
TYPICAL UNLESS OTHERWISE NOTED.

CUT/INSTALL ROOF PANELS SUCH  
THAT THERE IS A 1/2" GAP WHICH  
IS TO BE FILLED W/ A CONT. BEAD  
OF EXPANDING FOAM SEALANT.

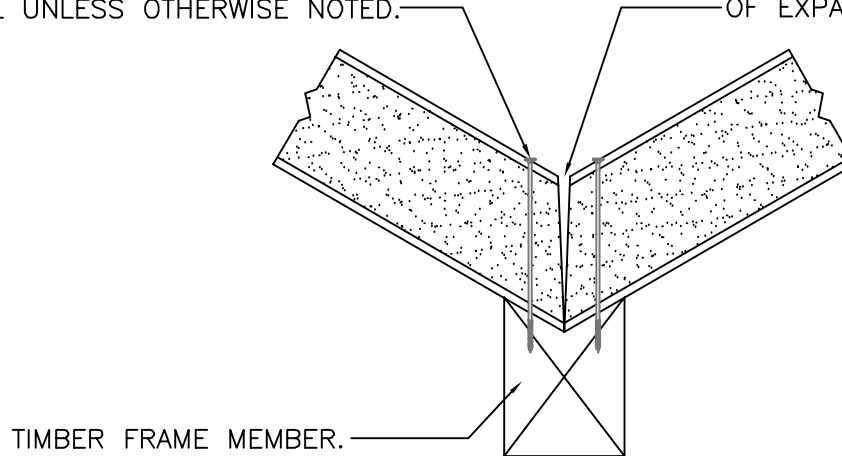

PANEL TYPE: STRUCTURAL PANEL APPLIED DIRECTLY TO THE FRAME

PANEL VALLEY CONNECTION DETAIL  
SCALE: 1" = 1'-0"



**Foard**  
P A N E L  
i n c o r p o r a t e d  
P.O. Box 185, West Chesterfield, NH 0346  
(603) 256-8800