

CONT. BLOCKING REQUIRED BEHIND ALL HOLD-DOWNS, SEE PANEL LAYOUTS FOR BLOCKING SPEC.

SIMPSON HOLD-DOWN EMBEDDED IN PANEL, SEE PANEL LAYOUTS FOR HOLD-DOWN LOCATIONS & SPEC'S.

INSTALL HOLD-DOWN TIGHT AGAINST INTERIOR OSB PANEL SKIN.

3" XPS SIP RIM PANEL

FLOOR SYSTEM BY OTHERS

2x8 P.T. SILL PLATE

ANCHOR BOLTS BY OTHERS.


ADD VERTICAL GRAIN SQUASH BLOCKING BELOW POST BY OTHERS.

FOUNDATION WALL

THREADED ROD MUST NOT PENETRATE THE END OF THE FLOOR JOIST.

NOTE: ALL RED DOTS - APPLY CONTINUOUS 3/8" DIA. BEAD OF MASTIC SEALANT BETWEEN 2x MEMBER & PANEL FOAM.

PANEL SILL CONNECTION W/ HOLD-DOWN  
SCALE: 1" = 1'-0"

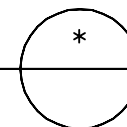

**Foard**  
P A N E L  
i n c o r p o r a t e d  
P.O. Box 185, West Chesterfield, NH 03466  
(603) 256-8800