


#43

STRUCTURAL VALLEY CONNECTION

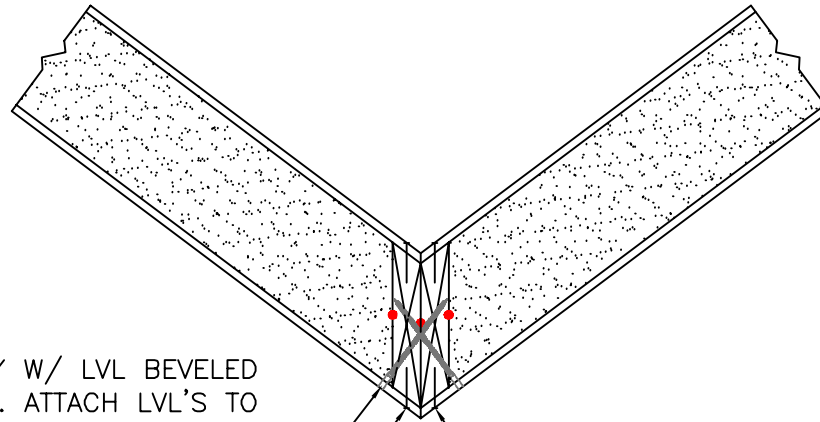


STUFF EXPOSED VALLEY W/ LVL BEVELED
BLOCKING MATERIAL. ATTACH LVL'S TO
EACH OTHER W/ COUNTER SUNK SIMPSON
SDWC15600 SCREWS @ 10" O.C.

APPLY CORVUM 30/30
SIP TAPE @ INT. VALLEY.

SECURE OSB PANEL SKINS TO BEVELED
LVL MATERIAL W/ 0.131" DIA. x 2½"
LONG GALV. NAILS @ 6" O.C. OR EQU.
PRIOR TO CRANING INTO PLACE.

NOTE: ALL RED DOTS – APPLY CONTINUOUS
¾" DIA. BEAD OF MASTIC SEALANT
BETWEEN 2x MEMBER & PANEL FOAM.

PANEL VALLEY CONNECTION DETAIL
SCALE: 1" = 1'-0"



Foard
P A N E L
i n c o r p o r a t e d
P.O. Box 185, West Chesterfield, NH 0346
(603) 256-8800