


# PLUMB CUT EAVE W/ LADDER FRAME DETAIL #25

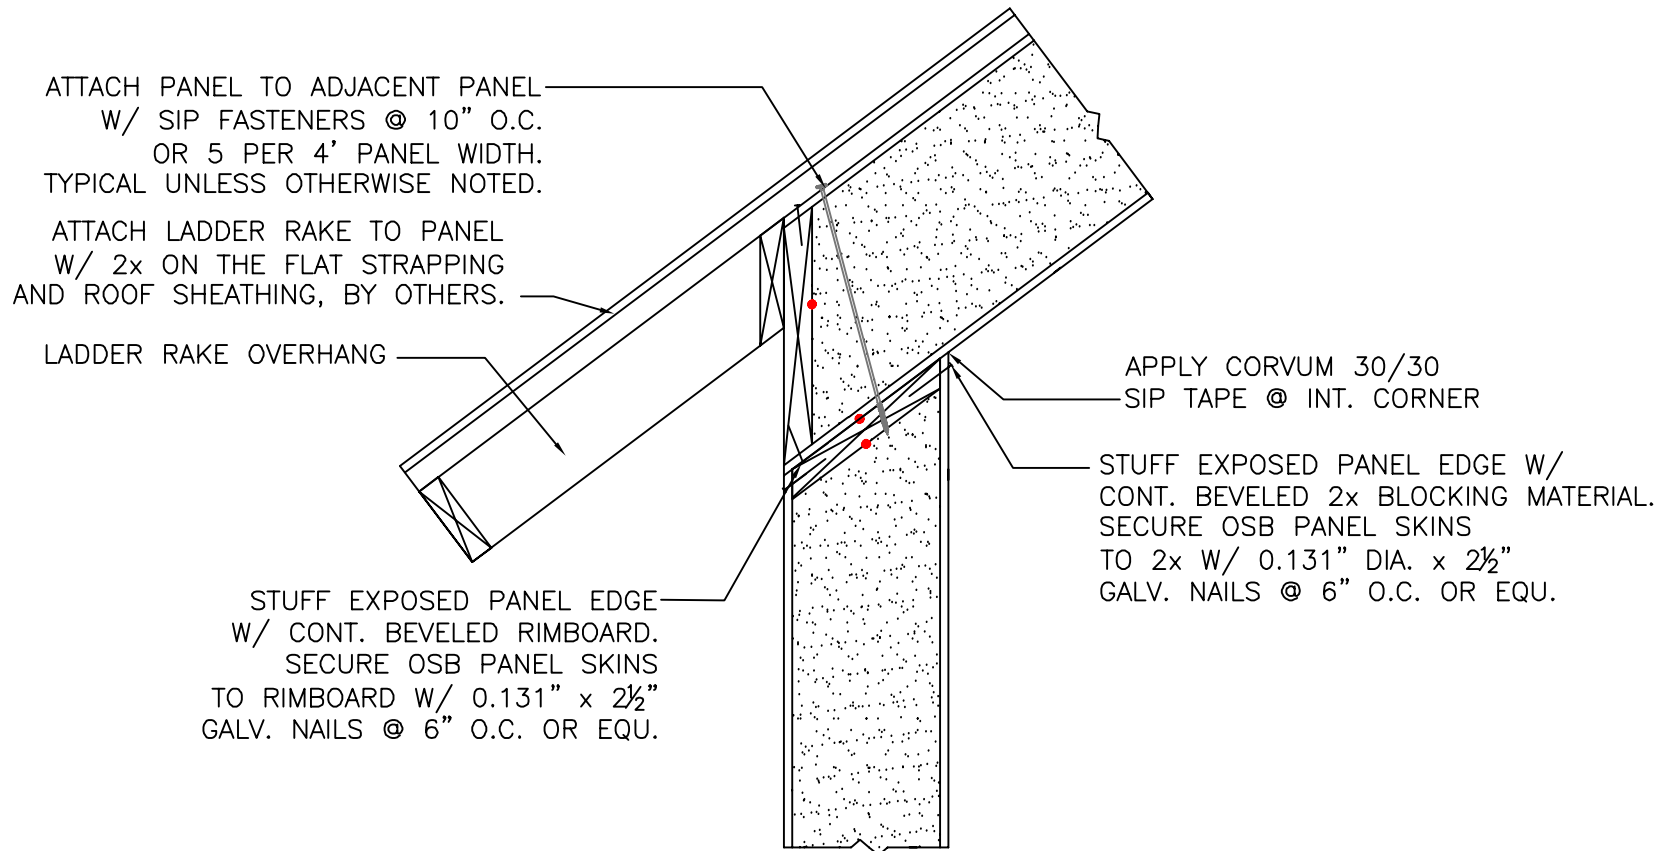

ATTACH PANEL TO ADJACENT PANEL  
W/ SIP FASTENERS @ 10" O.C.  
OR 5 PER 4' PANEL WIDTH.  
TYPICAL UNLESS OTHERWISE NOTED.

ATTACH LADDER RAKE TO PANEL  
W/ 2x ON THE FLAT STRAPPING  
AND ROOF SHEATHING, BY OTHERS.

LADDER RAKE OVERHANG

STUFF EXPOSED PANEL EDGE  
W/ CONT. BEVELED RIMBOARD.  
SECURE OSB PANEL SKINS  
TO RIMBOARD W/ 0.131" x 2 1/2"  
GALV. NAILS @ 6" O.C. OR EQU.

APPLY CORVUM 30/30  
SIP TAPE @ INT. CORNER

STUFF EXPOSED PANEL EDGE W/  
CONT. BEVELED 2x BLOCKING MATERIAL.  
SECURE OSB PANEL SKINS  
TO 2x W/ 0.131" DIA. x 2 1/2"  
GALV. NAILS @ 6" O.C. OR EQU.

NOTE: ALL RED DOTS - APPLY CONTINUOUS  
3/8" DIA. BEAD OF MASTIC SEALANT  
BETWEEN 2x MEMBER & PANEL FOAM.

PLUMB CUT EAVE W/ LADDER FRAME DETAIL  
SCALE: 1" = 1'-0"

25

**Foard**  
P A N E L  
i n c o r p o r a t e d  
P.O. Box 185, West Chesterfield, NH 03466  
(603) 256-8800