


#15

INSIDE STRUCTURAL CORNER CONNECTION

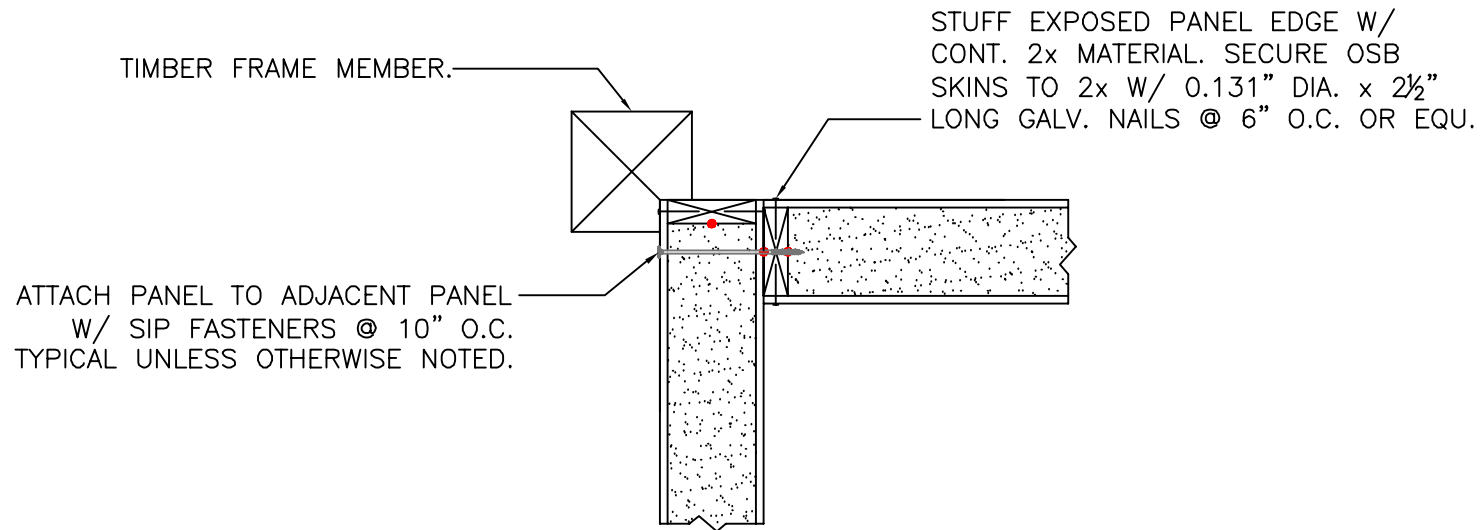


NOTE: ASSEMBLE PANEL SECTIONS ON GROUND PRIOR TO
CRANING INTO PLACE TO ENSURE INTERIOR OSB/DRYWALL SKINS
GET FASTENED TO 2x EMBEDDED IN PANEL.

NOTE: ALL RED DOTS – APPLY CONTINUOUS
3/8" DIA. BEAD OF MASTIC SEALANT
BETWEEN 2x MEMBER & PANEL FOAM.

PANEL TYPE: STRUCTURAL PANEL APPLIED DIRECTLY TO THE FRAME

PANEL CORNER CONNECTION DETAIL
SCALE: 1" = 1'-0"

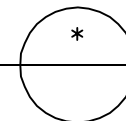

Foard
P A N E L
i n c o r p o r a t e d
P.O. Box 185, West Chesterfield, NH 0346
(603) 256-8800