


#17

# CORNER CONNECTION W/ HOLD-DOWN

ATTACH PANELS TO TIMBER FRAME MEMBERS W/ SIP FASTENERS @ 10" O.C. (5 PER 4' PANEL WIDTH) W/ A MIN. OF 2" OF EMBEDMENT INTO ALL TIMBERS. TYPICAL UNLESS OTHERWISE NOTED.

STUFF EXPOSED PANEL EDGE W/ CONT. 2x MATERIAL. SECURE OSB PANEL SKINS TO 2x MATERIAL W/ 0.131" DIA. x 2½" LONG GALV. NAILS @ 6" O.C. OR EQU.

CUT/INSTALL WALL PANELS SUCH THAT THERE IS A ½" GAP WHICH IS TO BE FILLED W/ A CONT. BEAD OF EXPANDING FOAM SEALANT.

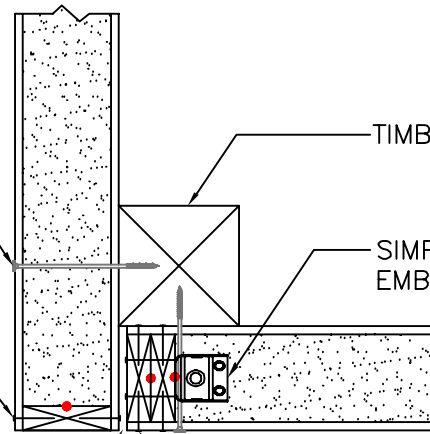

TIMBER FRAME MEMBER.

SIMPSON HOLD DOWN EMBEDDED IN SIP.


STUFF EXPOSED PANEL EDGE W/ CONT. 2x MATERIAL. SECURE OSB PANEL SKINS TO 2x MATERIAL W/ 0.131" DIA. x 2½" LONG GALV. NAILS @ 6" O.C. OR EQU.

NOTE: ASSEMBLE PANEL SECTIONS ON GROUND PRIOR TO CRANING INTO PLACE TO ENSURE INTERIOR OSB SKIN GETS FASTENED TO 2x EMBEDDED IN PANEL.

NOTE: ALL RED DOTS - APPLY CONTINUOUS 3/8" DIA. BEAD OF MASTIC SEALANT BETWEEN 2x MEMBER & PANEL FOAM.

PANEL TYPE: STRUCTURAL PANEL APPLIED DIRECTLY TO THE FRAME

PANEL CORNER CONNECTION DETAIL  
SCALE: 1" = 1'-0"



**Foard**  
P A N E L  
i n c o r p o r a t e d  
P.O. Box 185, West Chesterfield, NH 0346  
(603) 256-8800