


#51

ROOF PANEL TO LEDGER ATTACHMENT

ATTACH PANELS TO 2x'S BELOW
W/ SIP FASTENERS @ 10" O.C.
(5 PER 4' PANEL WIDTH) W/ A MIN. OF
2" OF EMBEDMENT INTO 2x'S.
TYPICAL UNLESS OTHERWISE NOTED.

ATTACH BEVELED 2x'S TO EACH OTHER
& TO LEDGER EMBEDDED IN SIP W/
2 ROWS OF 0.131" DIA. x 3/4" LONG
GALV. NAILS @ 8" O.C. OR EQU.

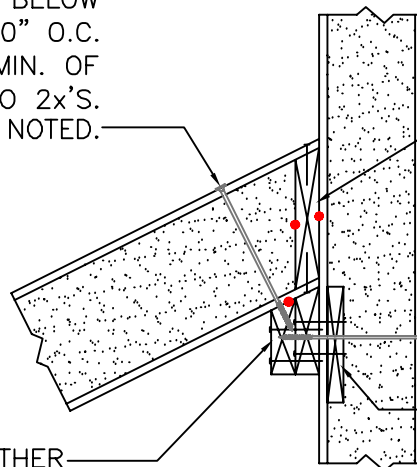

STUFF EXPOSED PANEL EDGE W/ CONT.
BEVELED 2x MATERIAL. SECURE OSB PANEL
SKINS TO BLOCKING W/ 0.131" DIA. x 2 1/2"
LONG GALV. NAILS @ 6" O.C. OR EQU.


FROM INTERIOR SIDE OF WALL PANEL
SCREW BACK INTO LEDGERS
W/ PANEL SCREWS @ 8" O.C.

1x8 OSB LEDGER EMBEDDED
IN PANEL TO ALLOW FOR
EXTERIOR BLOCKING ATTACHMENT.

NOTE: ALL RED DOTS - APPLY CONTINUOUS
3/8" DIA. BEAD OF MASTIC SEALANT
BETWEEN 2x MEMBER & PANEL FOAM.

ROOF TO LEDGER ATTACHMENT DETAIL

SCALE: 1" = 1'-0"



Foard
P A N E L
i n c o r p o r a t e d
P.O. Box 185, West Chesterfield, NH 0346
(603) 256-8800