


PLUMB CUT EAVE W/ LADDER FRAME DETAIL #25

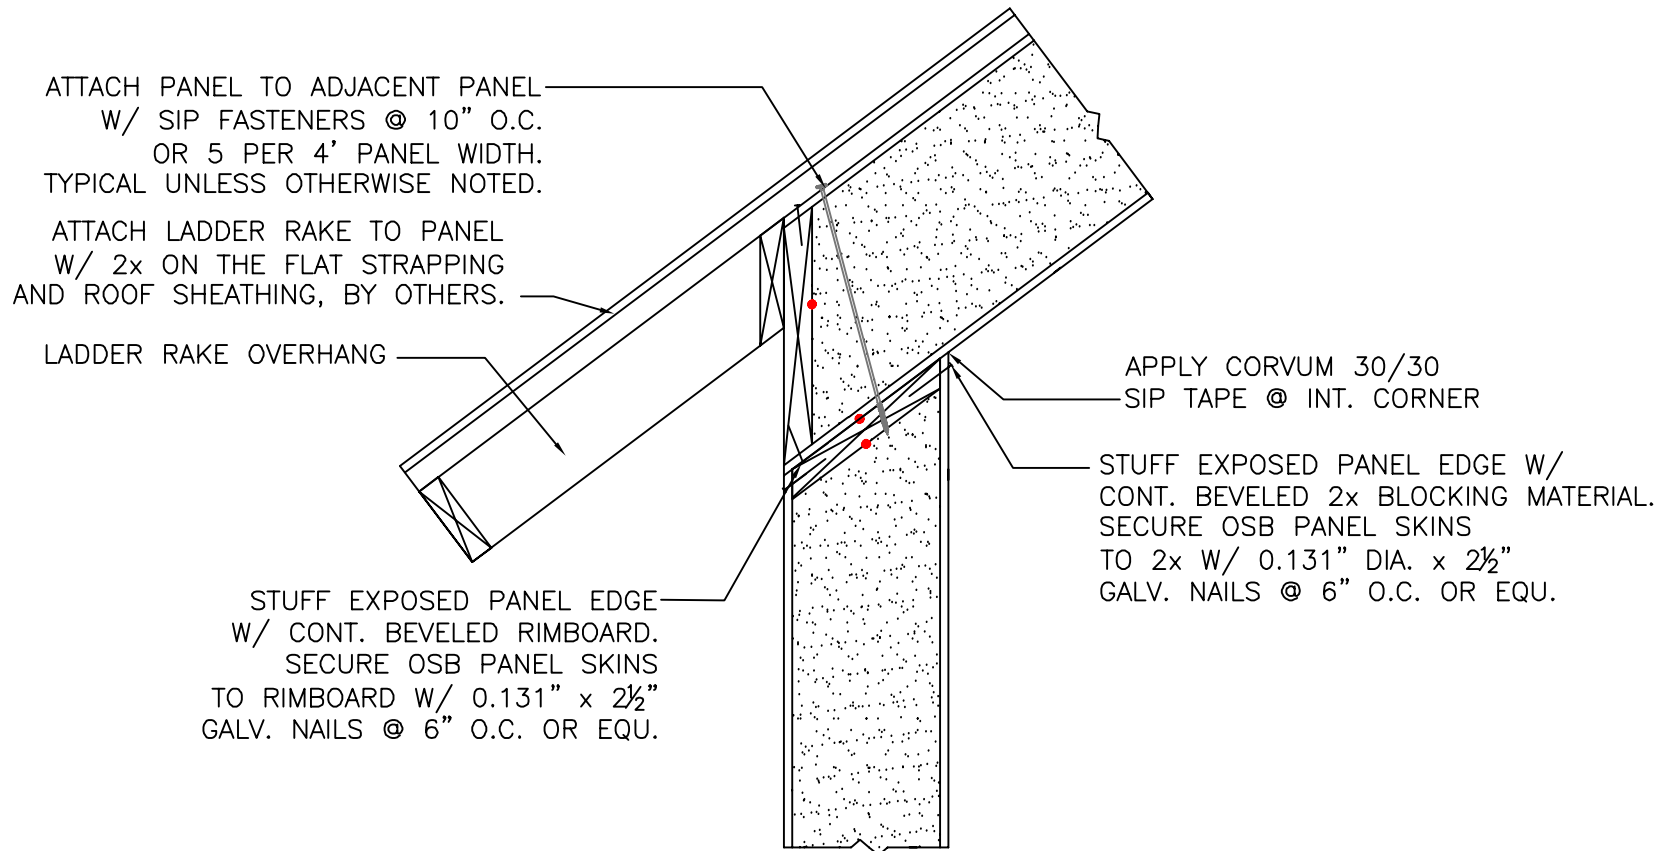

ATTACH PANEL TO ADJACENT PANEL
W/ SIP FASTENERS @ 10" O.C.
OR 5 PER 4' PANEL WIDTH.
TYPICAL UNLESS OTHERWISE NOTED.

ATTACH LADDER RAKE TO PANEL
W/ 2x ON THE FLAT STRAPPING
AND ROOF SHEATHING, BY OTHERS.

LADDER RAKE OVERHANG

APPLY CORVUM 30/30
SIP TAPE @ INT. CORNER

STUFF EXPOSED PANEL EDGE W/
CONT. BEVELED 2x BLOCKING MATERIAL.
SECURE OSB PANEL SKINS
TO 2x W/ 0.131" DIA. x 2½"
GALV. NAILS @ 6" O.C. OR EQU.

STUFF EXPOSED PANEL EDGE
W/ CONT. BEVELED RIMBOARD.
SECURE OSB PANEL SKINS
TO RIMBOARD W/ 0.131" x 2½"
GALV. NAILS @ 6" O.C. OR EQU.

NOTE: ALL RED DOTS – APPLY CONTINUOUS
3/8" DIA. BEAD OF MASTIC SEALANT
BETWEEN 2x MEMBER & PANEL FOAM.

PLUMB CUT EAVE W/ LADDER FRAME DETAIL
SCALE: 1" = 1'-0"

25

Foard
P A N E L
i n c o r p o r a t e d
P.O. Box 185, West Chesterfield, NH 03466
(603) 256-8800